
Colonial &. Hardware

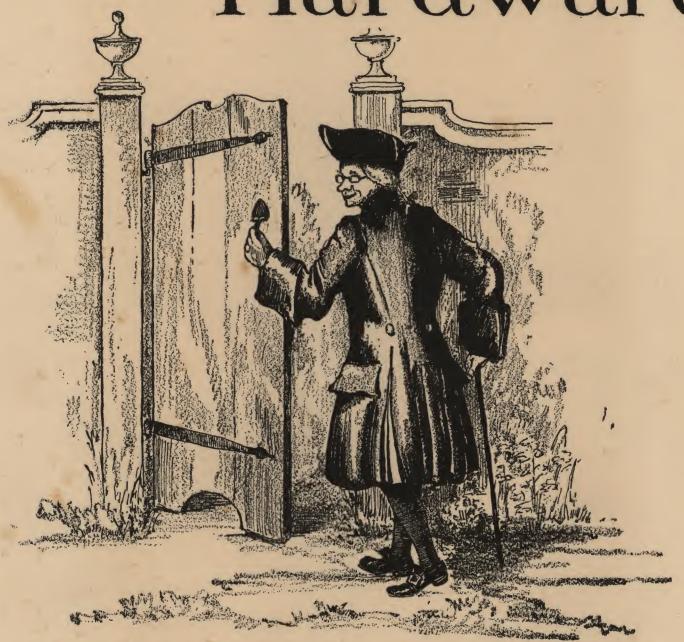

TODHUNTER

119 East 57th Street ~ New York

COLONIAL HARDWARE

AND wrought period hardware is an investment paying big dividends in both service and satisfaction, and in addition, its use considerably enhances the value of your property. It has been graphically described as "staunch and as full of character as a Pilgrim Father, with a similar austerity which time has made picturesque."

Hand wrought hinges, thumb latches, shutter hooks, etc., contribute in no small measure to the individuality and distinctive appearance of the home and no other hardware is as effective for the Colonial or Early English house.

The interest of hand wrought hardware, particularly the Colonial on account of its simplicity, lies not only in the design, but also in the character of the workmanship and surface texture.

This important feature, however, cannot unfortunately be indicated in a catalogue.

Our hardware is not stamped out or trip hammered, but is forged in the old manner by skilled smiths thoroughly familiar with the early Colonial metalwork, reproducing the original pieces with a fidelity which makes it hardly possible to distinguish the new from the old.

We can now supply these authentic reproductions of early craftsmanship at practically the same cost as stock hardware and you can obtain it with equal facility—it is not expensive.

All pieces are put through a process to make them rust resisting and black finished, and are supplied with the necessary hand hammered head screws. On special order it can be supplied half polished or in cast brass in antique finish.

This catalogue has been arranged so that selections for an entire house may very easily be made by reference to the index below. Essential sizes or descriptions not given under the illustrations, will be found on the accompanying price list. Being hand work, slight variations may be found in sizes given.

INDEX

| Exterior Doors Page 3 | CASEMENTS Page 8 | 8 |
|-----------------------|------------------|---|
| Dutch Doors | Shutters | 9 |
| CUPBOARDS | GARAGE | 0 |
| Interior Doors | GATES | 1 |
| French Doors | SUNDRY METALWORK | 2 |


EXTERIOR DOORS

| 3135 | Large brass knob 3" diameter, for use as door pull, with 2½" stud. (3135A—Same, 2½", 3135B—2", 3135C—1¾" | | steel with brass knob. State whether for right or left hand (illustration is right hand). |
|--|---|--|---|
| 21424 | with 1/6 spindle.) | 3194 * | |
| 3142‡ 3143‡ 3145* 3162 3172* 3193 * | Hinge plate, 22" x 2" wide at butt. Hinge plate, 22" x 2" wide at butt. Thumb latch, 2¾" x 11". Thumb turn, with ¾6" spindle. Thumb latch, 3¼" x 12½". Box lock, 7¼" x 4¼", face to center of keyhole 2¾", to hub 5½", strike 1" wide, with 2" solid knob and ¾6" straight spindle. All brass or antique | 3195 3202* 3209 3211* 7818 | spindle. Brass or antique steel. Heavy covered escutcheon for standard bit-key, 1" x 2½". Brass or antique steel. Thumb latch 4" x 15½". Cover for ½" lock cylinder. Cast brass thumb latch, ½¼" x 8¾". Brass letter box slot, 7" x ½½", with concealed bolts for fastening, including brass frame for slot on inside of door. |


*To operate a cylinder lock, a thumb latch handle is used on each side of door, with cylinder cover 3209 outside and thumb turn 3162 to throw dead bolt, on inside. We can also supply lock with black front and cylinder, to match hardware. When not used to operate a lock, a 7" latch bar, of type shown for interior doors, is used on inside.

‡We can supply stock butts in black finish for use with these plates.

* Also made smaller, see page 6.

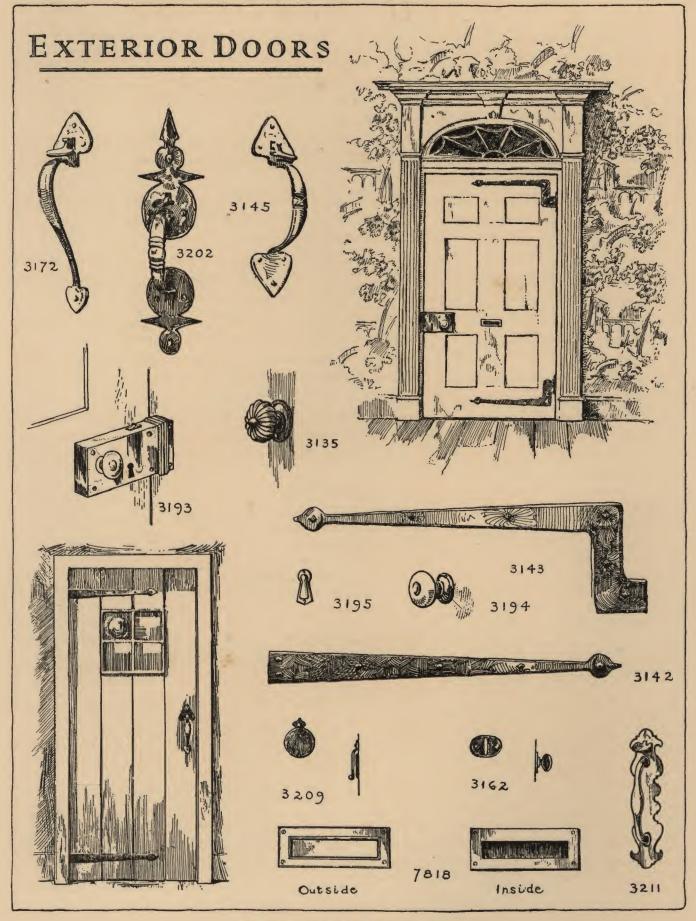

For description of above see opposite page.

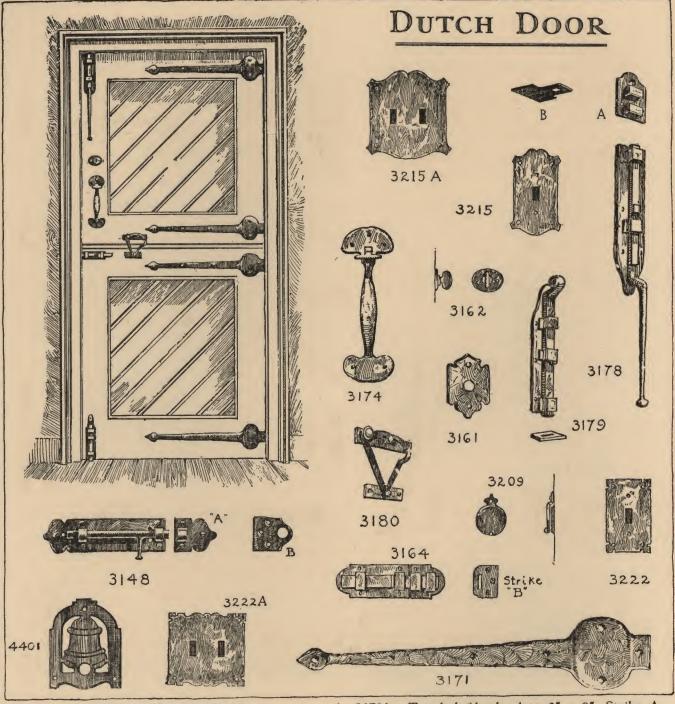

Bolt, 7½" x 2", strike 2½" long. Bell plate, 15%" x 2½", ½" hole. Thumb turn, with 36" spindle. 3148† 3161 3162 Bolt, 45%" x 2", including flush strike 67%" long. Also made smaller, see page 6. Hinge plate, 22" x 2" wide at butt. 3164†

3171 (3170-Same, 14".)

We can supply stock butts in black finish for use with these plates.


3174 Thumb latch, 31/8" x 91/4". To operate a cylinder lock, a thumb latch handle 10 operate a cylinder lock, a thumb fatch hardine is used on each side of door, with cylinder cover 3209 outside and thumb turn 3162 to throw dead bolt, on inside. We can also supply lock with black front and cylinder, to match hardware. When not used to operate a lock, a 7" latch bar, of type shown for interior doors, is used on inside.

Top bolt, back plate 2" x 9", Strike A 2" x 3". 3178† Bottom bolt, back plate 2" x 8". Quadrant (to hold the two doors together) 3179 3180 with brass knob. Cover for 11/4" lock cylinder. 3209 Brass electric toggle switch plate for standard box, 3" x 51/4". 3215 3215A Brass electric toggle switch plate for standard box, 5½8" x 5½4". Antique steel electric toggle switch plate for standard box, 2¾" x 4½".


3222A Antique steel electric toggle switch plate for standard box 4¾" x 4½". Bell plate, brass or antique steel, 31/8" x 4401

4", 5/8" hole.


†Strike "B" is used when trim is not flush.

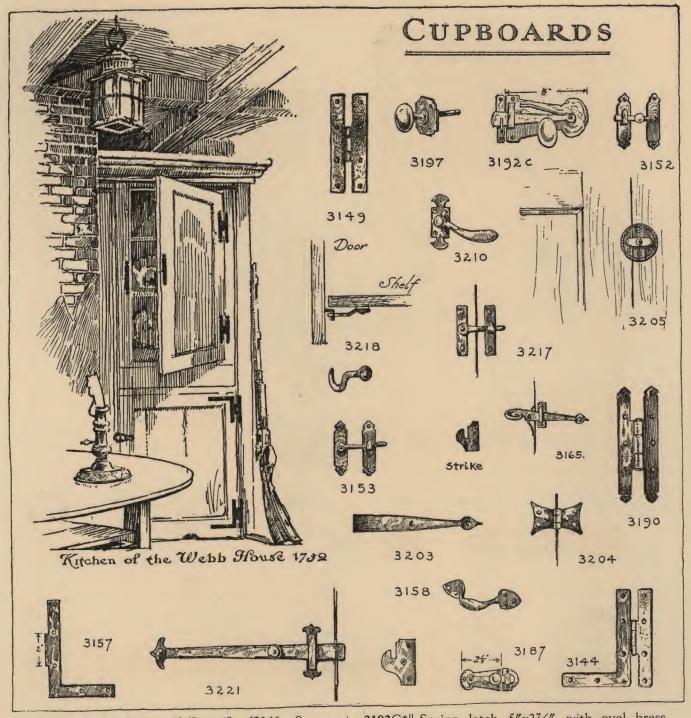

3192C*|| Spring latch, 5"x2½", with oval brass knob. Strike ¾" wide.
3197 Oval brass knob, 1½", on wrought iron escutcheon, 1¾" x 2½", with ½6" spindle H. L. hinge, $5\frac{1}{4}$ " x 6". (3146—Same, 7" x 7", 3181—Same, 4" x $4\frac{1}{2}$ ".) H hinge, $2\frac{1}{8}$ " x 6". (3137—Same, $1\frac{7}{8}$ " x $4\frac{1}{2}$ "; 3159—Same, $2\frac{1}{8}$ " x 7"; 3183— 3144 3149 set on diamond. Same, 23/4" x 91/4".) Latch, 31/4" high, brass knob. Hinge plate 8" x 1" at butt. 3203† 3152 Butterfly hinge, $3\frac{1}{4}$ " x $2\frac{1}{8}$ ". Button latch, brass only, $1\frac{3}{4}$ " diameter. Latch, 31/4" high. (3191—Same, 7" high.) Hinge plate, 4" x 6". 3204 3153|| 3205 3157 | Lever handle, 4" from center of hub, escutcheon 1½" x 4½", with 56" straight spindle set on diamond. 3210* Drawer pulls or window lifts, 5" wide. 3158 (3158A—Same, 21/4" wide.) Throw-over latch 3¼" high. Shelf catch, for one leaf of double doors. Latch, 43/4" long. (3165A—Same, 71/4".) 3165* 3217 3187* Latch, 11/4" x 21/2", brass knob, strike 1". 3218 Brass latch bar 12" long. Hinge, $2\frac{1}{4}$ " $\times 7\frac{1}{4}$. (3182 – Same, $1\frac{7}{8}$ " $\times 3\frac{1}{2}$ ".) 3221

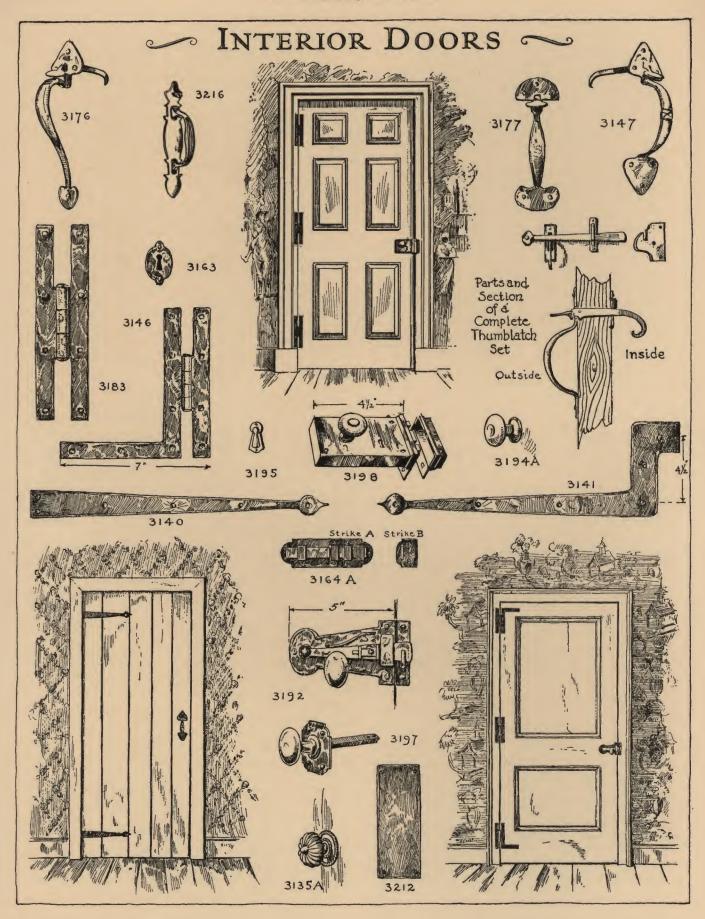

For description of above see opposite page.

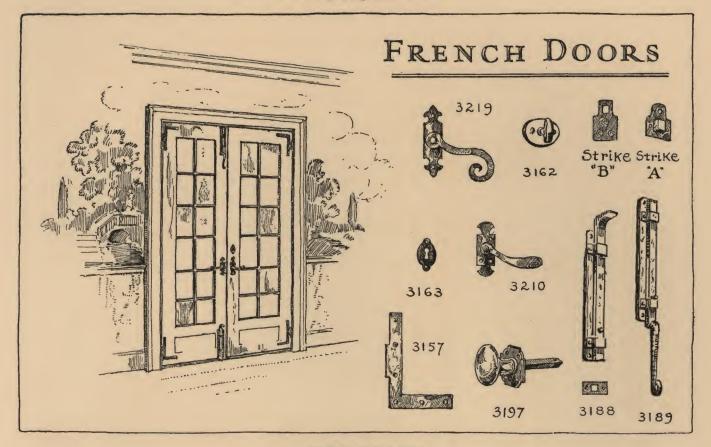

FRENCH DOORS

| | FRENC |
|------|--|
| 3157 | Hinge plate, 4" x 6". We can supply stock butts in black finish for use with these plates. |
| 3162 | Thumb turn, with 3/6" spindle. |
| 3163 | Keyhole plate, for standard bit key, $1\frac{1}{8}$ " x 2". |
| 3188 | Bottom bolt, back plate 1½" x 8". |
| 3189 | Top bolt, back plate $1\frac{1}{2}$ " x 8". Strike "B" is used where trim is not flush. |
| 3197 | Oval brass knob 15%" on wrought iron es- |

cutcheon $1\frac{3}{4}$ " x $2\frac{1}{4}$ ". With $\frac{5}{16}$ " spindle set on diamond.

3210* Lever handle 4" from center of hub, escutcheon $1\frac{1}{4}$ " x $3\frac{1}{4}$ ", with $\frac{5}{16}$ " straight spindle set on diamond.


3219* Lever handle 37/8" from center of hub, escutcheon 1" x 33/4" with 5/6" straight spindle, set on diamond.

*Mention hand wanted (as shown it is right hand).

INTERIOR DOORS (See opposite page)

| | Title Control | (occ obt | bosice page) |
|---------------|---|----------|---|
| 3135A | Brass knob, $2\frac{1}{2}$ ". (3135B—Same 2", 3135C— $1\frac{3}{4}$ ". For $\frac{5}{16}$ " spindle.) | 3194A | Solid 15%" knob, with rose and 5/6" straight spindle, in cast brass or half |
| 3140‡ | Hinge plate, 14" x 134" at butt. | | polished iron. |
| 3141‡ | Hinge plate, 14" x 2" at butt. | 3195 | Heavy covered escutcheon, 1" x 21/8", for |
| 3146 3147§ | H. L. hinge, 7" x 7". For flush trim. Thumb latch, 2" x 8". | | standard bit key. Brass or antique steel. |
| 3163 | Keyhole plate for standard bit key, $1\frac{1}{8}$ " x 2 ". | 3197 | Oval brass knob, $1\frac{5}{8}$, on wrought iron escutcheon, $1\frac{3}{4}$ " x $2\frac{1}{4}$ " with $\frac{5}{16}$ " spindle |
| 3164A | Bolt, back plate $2\frac{7}{8}$ " x $1\frac{3}{8}$ ", strike $1\frac{1}{8}$ " | | set on diamond. |
| | long. For flush trim use strike A, otherwise B. (3164—Same, $45/8$ " long.) | 3198* | Box lock, 4½" x 4", face to center of key- |
| 3176§ | Thumb latch, 23/8" x 83/4". | | hole 2", to hub 33%", strike 1" wide, |
| 3177§ | Thumb latch, 21/4" x 7". | | with 15%" knob and 56" straight spindle. All brass or antique steel with |
| 3183 | H hinge, $2\frac{3}{4}$ " x $9\frac{1}{4}$ ". For flush trim. | | brass knob. Also made larger, see |
| 3192* | Spring latch, 5" x 27/8", strike 3/4" wide, | | page 3. |
| | with oval brass knob. For 5/6" spindle set on diamond. (3192A—Same, with locking | 3212 | Push plate, 10" x 23/4". |
| | device.) For flush trim. | 3216 | Brass thumb latch, 1½" x 8½". |

*Mention hand wanted (as shown 3192 and 3198 are right hand). §A complete thumb latch set consists of handle with thumb piece, and for reverse side, latch bar 7" long, two guides and strike. ‡We can supply stock butts in black finish for use with these plates.

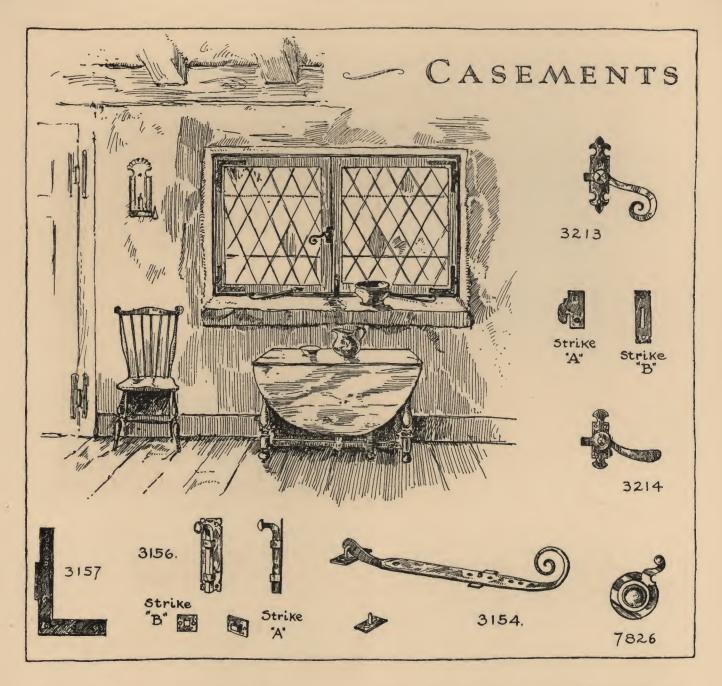

3154 Casement adjuster, 123/4" long.

3156 Bolt, back plate 1" x 3½", brass knob.

Please state if trim is flush or otherwise.

3157 Hinge plate 4" x 6". We can supply stock butts in black finish for use with these.

3213† Lever handle fastener, 4" from center of hub, escutcheon 1" x 334".

3214† Lever handle fastener, 4" from center of hub, escutcheon 11/8" x 31/4".


7826 Brass pull for electric bell, 2½" diameter.

†Please give hand required (is right hand as shown,) and if trim on center mullion (if any) is flush or otherwise.

NOTES

Any hinge plate can be supplied to special order, made with butt as a complete hinge.

Many of these designs are suitable made in brass, which can be supplied on special order,

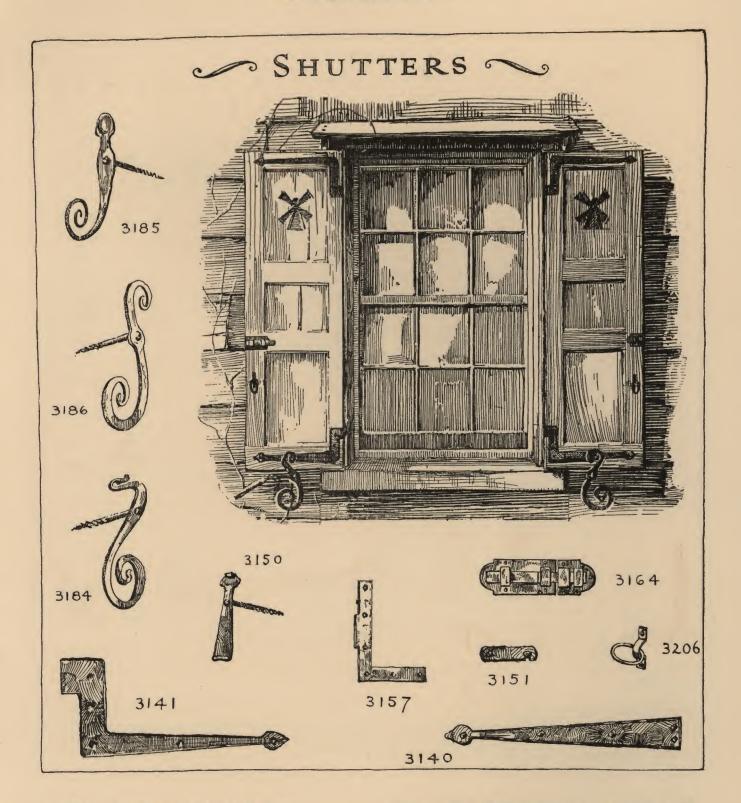


| 3140‡ | Hinge plate, 14" x 13/4" at butt. |
|-------|---|
| 3141‡ | Hinge plate, 14" x 2" at butt. |
| 3150 | Hold back, length 6", on 5" lag. |
| 3151 | Latch, 3½" long. |
| 3157‡ | Hinge plate, 4" x 6". |
| 3164 | Bolt, 45/8" x 2", strike 21/4" long. (3164A |
| | —same 27/8" x 13/8" strike 11/8" long). |

3184* Hold back, length 7", mounted on 5" lag screw.
3185 Hold back, length 7", mounted on 5" lag.

3186* Hold back length $9\frac{1}{4}$ ", (3186A—same $6\frac{1}{2}$ " long) mounted on 5" lag screw.

3206 Ring pulls, $2\frac{1}{2}$ diameter.

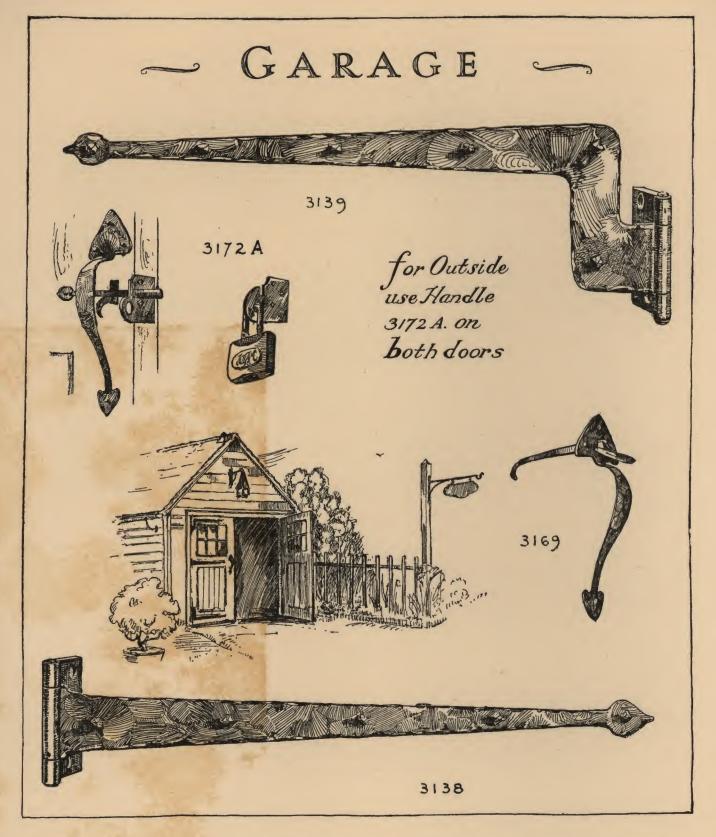


Hinge, length to center of knuckle 36", leaf $2\frac{1}{4}$ " wide.

Hinge, length to center of knuckle 36", leaf $2\frac{1}{4}$ " wide. 3138

3139

Thumb latch 3½" x 12½" (for inside), with 7" latch bar and mortise guide and strike for use with padlock (outside). Pull handle 3½" x 12½" (for outside). 3169

3172A

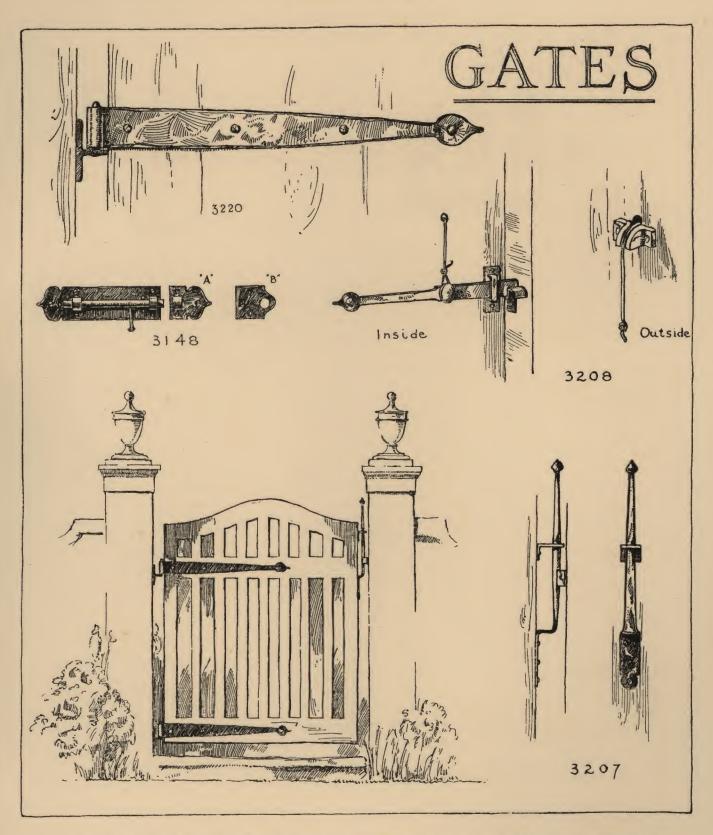


Bolt $7\frac{1}{2}$ " x 2", strike $2\frac{1}{2}$ " long. Strike B is used when trim is not flush. 3148

Spring latch for low gates, $1\frac{1}{4}$ " wide x $14\frac{1}{4}$ " long. 3207

3208


Latch bar, 11½" long, with rawhide latch string. Specify if for use with double or single swing gate. Hinge 253/4", for double swing gate.

3220

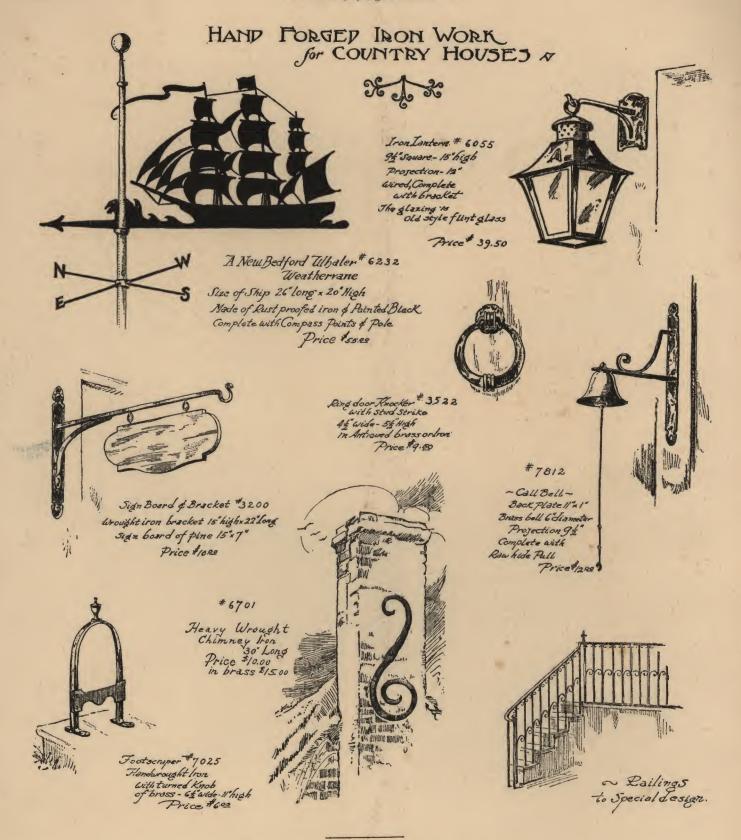


TODHUNTER INC. 119 EAST 57TH STREET, N.Y. CITY

MANTELPIECES & FIREPLACE EQUIPMENT & LIGHTING FIXTURES & DECORATIVE METALWORK









Digitized by:



ASSOCIATION FOR PRESERVATION TECHNOLOGY www.apti.org

For the

BUILDING TECHNOLOGY HERITAGE LIBRARY


https://archive.org/details/buildingtechnologyheritagelibrary

From the collection of:



SOUTHEASTERN ARCHITECTURAL ARCHIVE SPECIAL COLLECTIONS HOWARD-TILTON MEMORIAL LIBRARY

http://seaa.tulane.edu





~ Lailings to Special Lesign.

TODHUNTER INC.

119 EAST 57TH STREET, N.Y. CITY

MANTELPIECES & FIREPLACE EQUIPMENT & LIGHTING FIXTURES & DECORATIVE METALWORK